

Instruction Sheet For #2318

Primary Locking Bar

Use on Sportster and Buel I 1991-Present



Refer to H.D.® Service Manual for specifications. WARNING: Disconnect negative battery cable!

Rev NC

7/96

- 1. Refer to service manual for removal of primary cover.
- 2. If you are removing motor sprocket nut, install locking bar so that it is laying flat in between the clutch sprocket and the motor sprocket.
- 3. With locking bar in between the two teeth on the front motor sprocket, in the 4-O'clock position, and the other end of bar in between the two teeth of the clutch hub at about the 10-O'clock position.
- 4. You are ready to remove the motor sprocket nut using hand tools only! WARNING: Do not use air or electrical impact.
- 5. To install front motor sprocket nut to the right torque, install the locking bar opposite of the instructions in #2 with one end of bar at clutch hub in the 8-O'clock position and the other end at the 2-O'clock position.