



INSTRUCTION SHEET FOR TOOL #2256

MAIN DRIVE GEAR SEAL INSTALLER USE ON ALL 5-SPEED 1340CC MODELS



Use to install the main drive gear oil seal to the proper depth with transmission assembled.

Refer to H.D.® Service Manual for specifications.

1. Slide on the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
2. Install seal with spring facing transmission case.
3. Install seal driver and hand press seal into main drive gear. Light taps with a rubber mallet may be used if desired. The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.


"From the Track... To the Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422



INSTRUCTION SHEET FOR TOOL #2256

MAIN DRIVE GEAR SEAL INSTALLER USE ON ALL 5-SPEED 1340CC MODELS

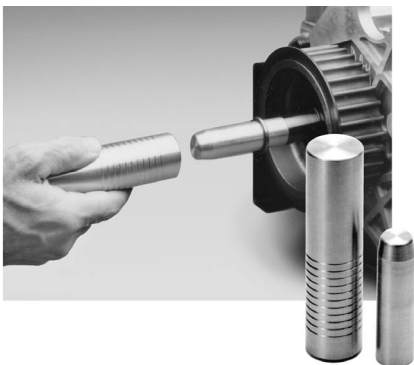

Use to install the main drive gear oil seal to the proper depth with transmission assembled.

Refer to H.D.® Service Manual for specifications.

1. Slide on the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
2. Install seal with spring facing transmission case.
3. Install seal driver and hand press seal into main drive gear. Light taps with a rubber mallet may be used if desired. The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"From the Track... To the Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422