


Instruction Sheet For #1050

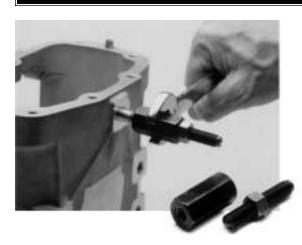

Transmission Stud Installer Tool Use on all Big Twin Transmissions with bottom studs. All 4 & 5 speeds.

- 1. Refer to H.D.® Service Manual for specifications.
- 2. Install lubed stud in the tool, stop 1-2 threads before end of the last thread. Screw into tool the lubed adjuster, No. 1049, until it contacts the end of the stud.
- 3. Tighten lock nut No. 2205.
- 4. Install stud in case, using JIMS® No. 1084 Locktite, all the way down until tool contacts case. CAUTION: For full threaded studs only.
- 5. To remove tool loosen lock nut and screw, remove tool from installed stud.